



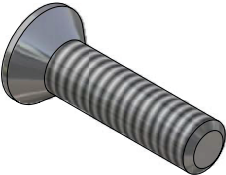

3 SLAT OTTOMAN

ASSEMBLY INSTRUCTIONS

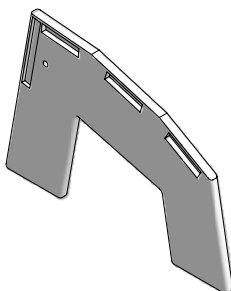
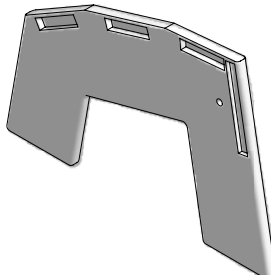
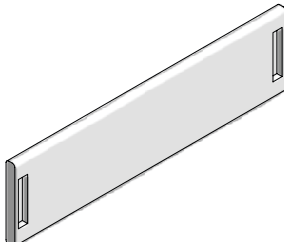
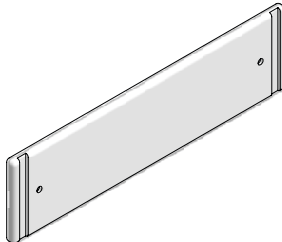
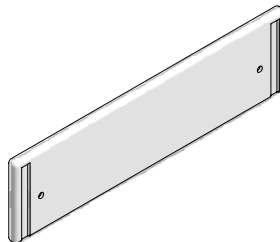
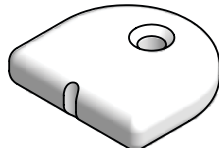
lolldesigns.com 1-877-740-3387



INCLUDED HARDWARE

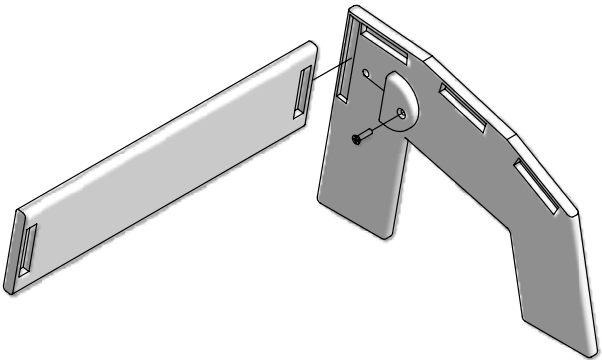
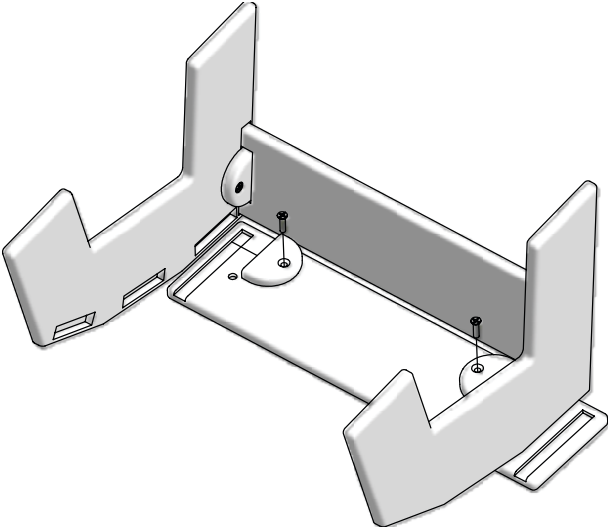
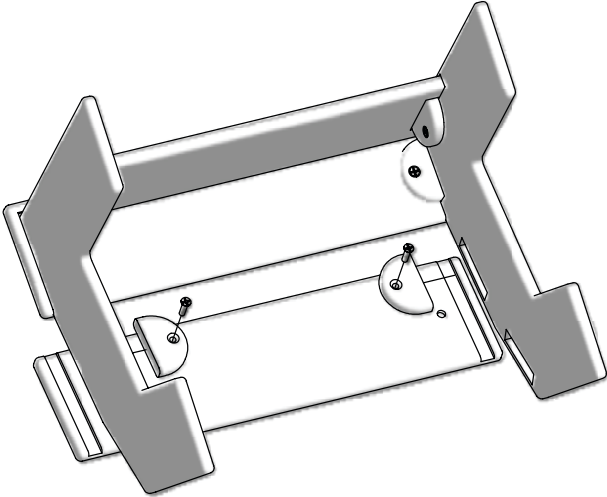
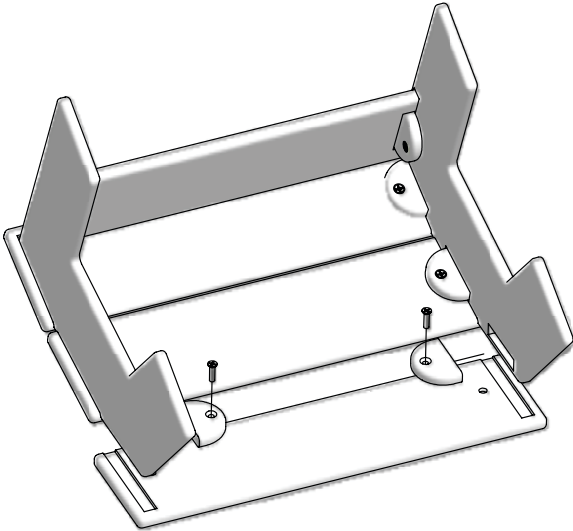
	COUNT		COUNT
7/8" BOLT (YELLOW)	8	5/32" ALLEN WRENCH	1
			

INCLUDED PARTS

COUNT		COUNT		COUNT		COUNT		COUNT			
LEFT LEG	1	RIGHT LEG	1	FACEPLATE	1	MIDDLE SLAT	1	END SLAT	2	BLOCK G	8
											

ASSEMBLY INSTRUCTIONS

* It is very important that you finger tighten all bolts into inserts to ensure that you do not cross-thread bolts and inserts before tightening. It will also be easier if you wait to tighten bolts until you have all bolts installed and the piece completely assembled. This will allow for more movement of individual pieces and help in aligning holes with inserts. Use the Allen Tool provided to finish tighten bolt until snug.

1	ATTACH LEGS TO FACEPLATE	 <p>*Please read Assembly Tips before beginning assembly.</p> <p>Place faceplate with cut outs toward inside into rear cut out in leg. Insert block (recessed side out to accomodate bolt) into faceplate. Insert bolt through block into leg and tighten. Repeat for opposite leg.</p>	2	ATTACH END SLAT - BACK	 <p>Align end slat grooves, open ends to the front, with legs top. Insert blocks into leg cut outs. Insert bolts through blocks into end slat and fasten.</p>
3	ATTACH MIDDLE SLAT	 <p>Align middle slat grooves with legs top. Insert blocks into leg cut outs. Insert bolts through blocks into middle slat and fasten.</p>	4	ATTACH END SLAT - FRONT	 <p>Align end slat grooves, open end to the back, with legs top. Insert blocks into leg cut outs. Insert bolts through blocks into end slat and fasten.</p>

DAMAGED PRODUCT
Sometimes accidents occur. Please inspect your Loll furniture when you receive it to make sure that it has not been damaged during shipping. If damage has occurred please take digital pictures of the damaged furniture and the box it was shipped in, and email them to sales@lollidesigns.com or call Customer Service using our toll free number: 877.740.3387, ext. 1. The damage will be assessed and you will be contacted with a solution to the problem. It may be helpful to save all of your packaging material in case a return is necessary.

ASSEMBLY TIPS

"Please read before beginning assembly!"
To avoid damaging furniture perform the assembly of your Loll furniture on a clean soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in. Components should not be unnecessarily forced together! If it seems parts aren't fitting together you likely have something wrong and you should reread the instructions to ensure you are aligning the proper components. If your piece of furniture requires "Blocks" for assembly one side may have protective film on it. This surface is hidden after assembly so the film can remain on the block or it can be removed. Use a Cordless Screw Gun if you have one and know how to use it. Set the clutch setting at medium torque. We do not recommend using an electric drill with a cord and without a clutch to install bolts in inserts as you can easily overtighten and damage the product. All bolts come standard with a thread coating to reduce bolts loosening after assembly while still allowing removal and reuse of the bolt. Start all bolts by hand, with the Allen Key, or the Loll Tool and tighten firmly until parts are drawn tight together and you can't muscle the bolt any tighter. It's virtually impossible to over tighten by hand. Watch the assembly videos at www.lollidesigns.com/videos for even more information and visual aids. If you have more questions please contact your Loll Sales Associate or Customer Service for support at 877.740.3387. **A Pro Tool Kit** can also be purchased from Loll for multi piece assembly jobs.

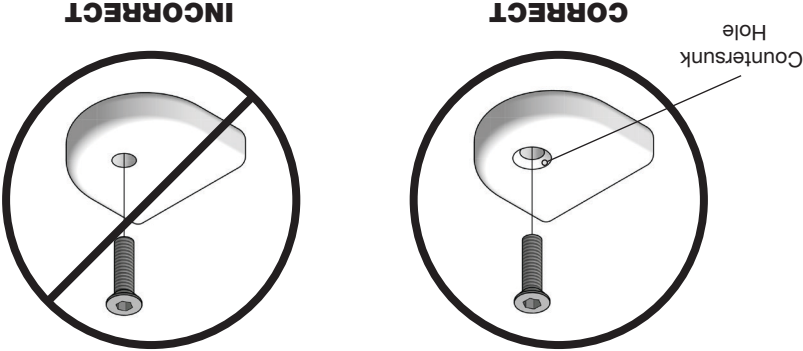
**** Please Recycle the BOX and paper packaging. The green plastic stretch wrap we use is compostable.**



Scan for assembly tips and videos

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below.



LOLL TOOL

Locate the box marked **"Tool Included"**



We want you to love your Loll.
Reach out if you need **lolly**gagging assistance.
877-740-3387
sales@lollidesigns.com

5912 Waseca Street | Duluth, Minnesota 55807



SHARE YOUR LOLL

lollidesigns.com
877.740.3387



Loll Designs inspires people to appreciate the outdoors.

ASSEMBLY INSTRUCTIONS & PRODUCT INFO:

3 SLAT OTTOMAN

